



Information about joint sealants can be found in details OR-E-105 and OR-E-106.

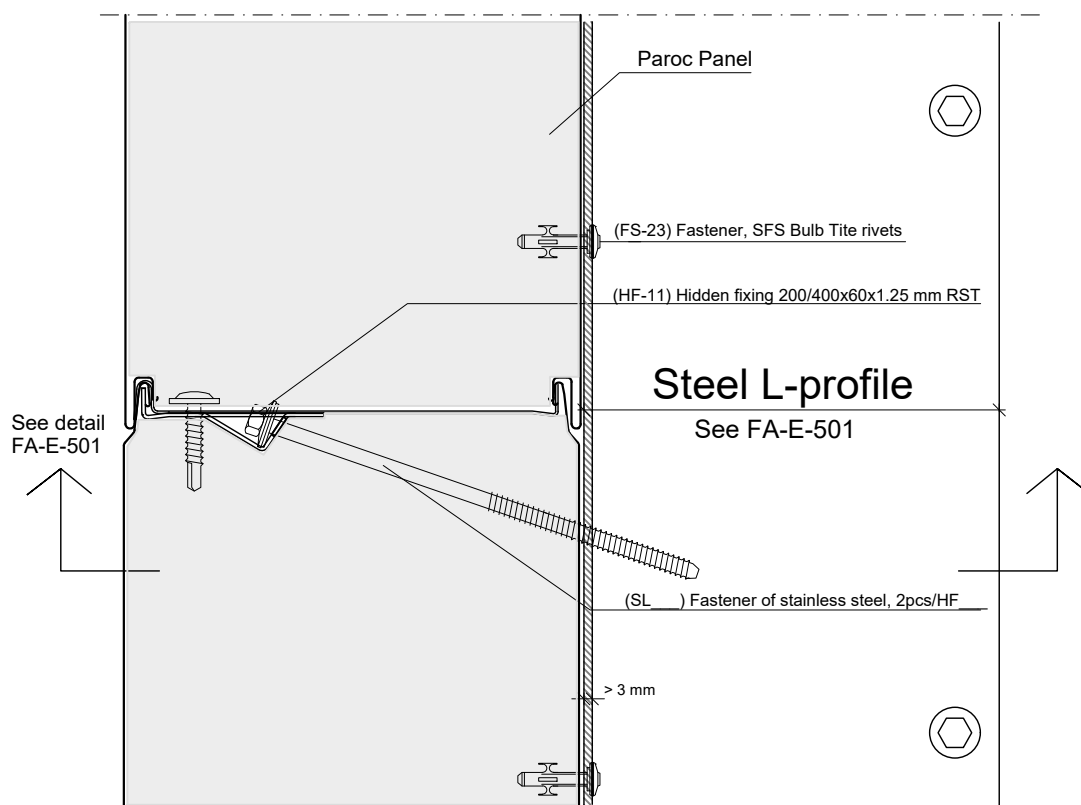

HF150

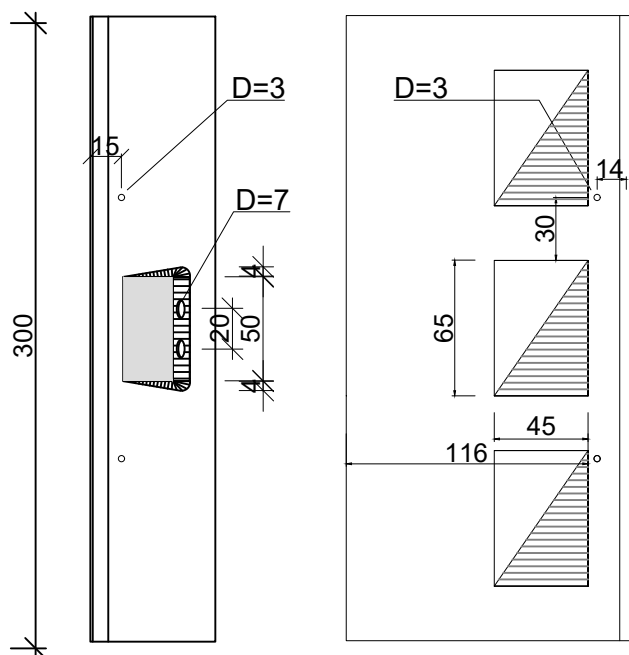

Attention!!! Use allways fasteners of stainless steel

Use screw type SL050 to HF080
 Use screw type SL080 to HF100
 Use screw type SL100 to HF120
 Use screw type SL120 to HF150
 Use screw type SL150 to HF175
 Use screw type SL150 to HF200
 Use screw type SL200 to HF240