

Attention!

Joints always at same level for cover flashings as for horizontal panel joint!

Never install two flashings together with screws in length direction!

Use butyl tape over the support flashing joints!

Always use a tape roller on sealant tapes to ensure maximum sealant effectivity!



Information about joint sealants can be found in details OR-E-105 and OR-E-106.

(TR___) Joint insulation, Stone wool

(TT-31) Frame sealant stripe, steel/wood

Paroc Panel



(FS-22) Flashing rivet c/c 300 mm

(TT-43) Sealant tape, butyl, omega flashing

(FS-11) Flashing screw, RST c/c 300 mm

100mm wide cut in the panel surface plate over the socket
Push the safety plate VP-11 in the whole way to inside

See also details FA-E-304-9

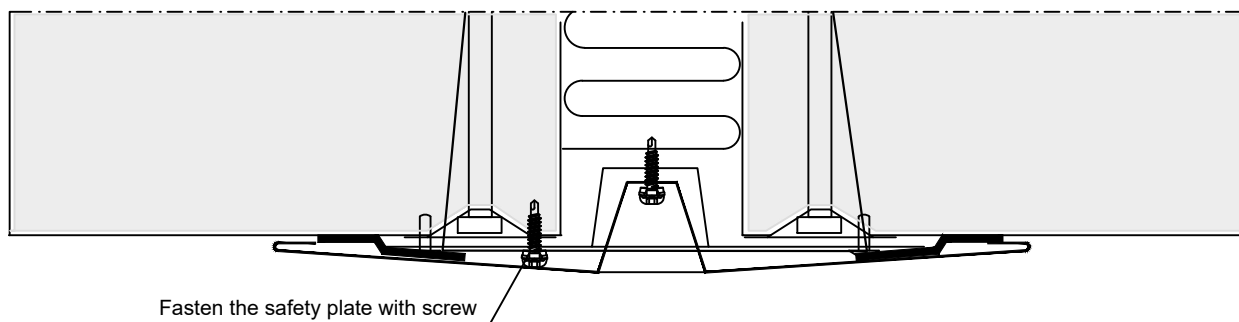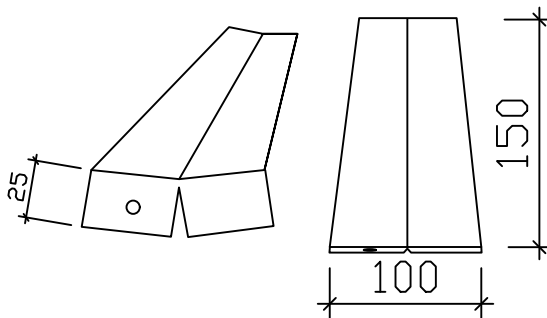

Fasten the safety plate with screw