





Hidden fixing parts

1. e.g. (HF100)
2. Panel fastener
3. Screw (FS-11)

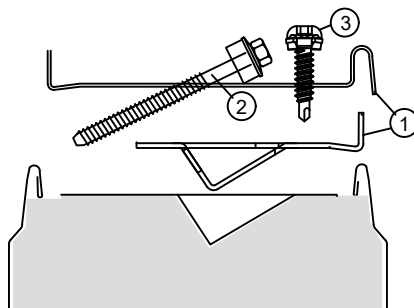

Installation:

- A Install lower part into outer male joint
- B Install upper part into inside male joint
- C Lock them together using 2 small screws through the 2 small holes in the profiles
- D Predrill for the panel fasteners through the profile hole(s)
- E Install the panel fasteners. Amount according the wind loads
- F Install next panel

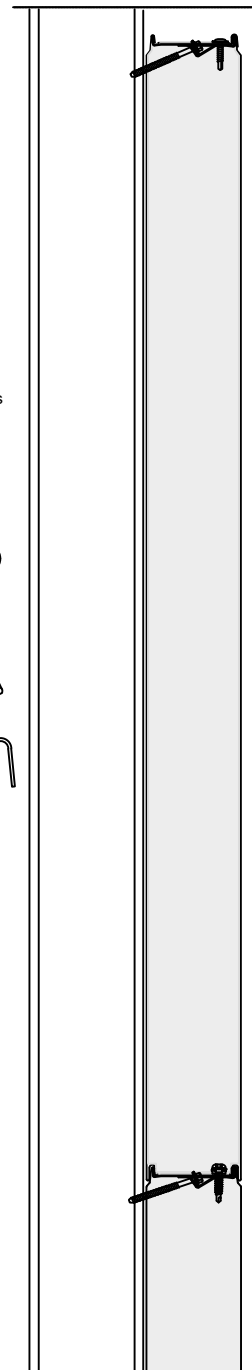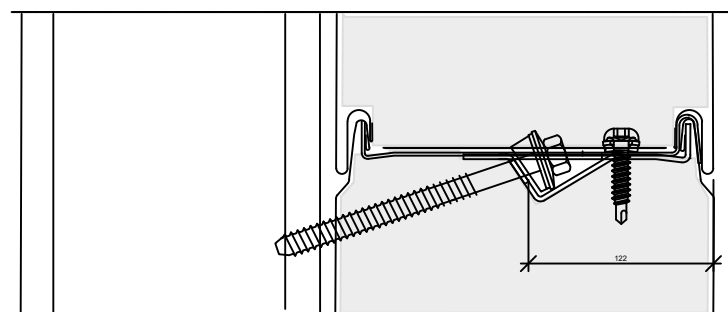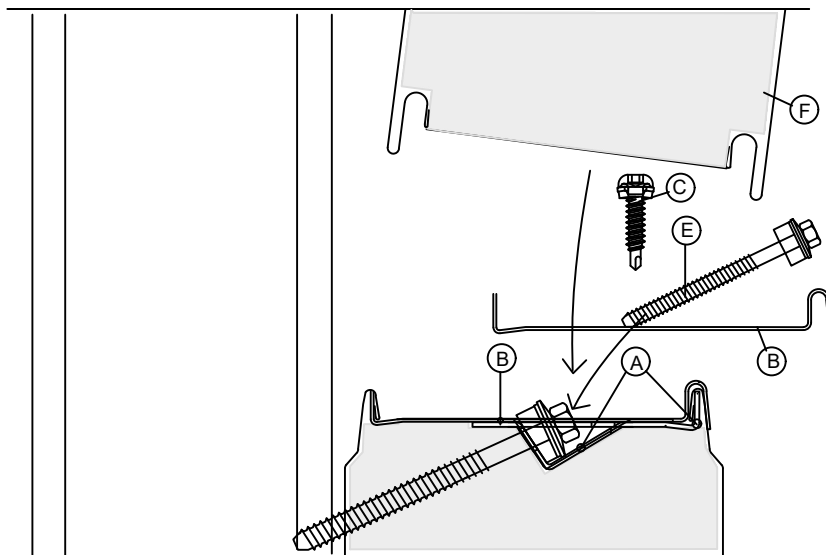

Attention!!! Use allways fasteners of stainless steel

- Use screw type SL050 to HF080
- Use screw type SL080 to HF100
- Use screw type SL100 to HF120
- Use screw type SL120 to HF150
- Use screw type SL150 to HF175
- Use screw type SL175 to HF200
- Use screw type SL200 to HF240
- Use screw type SL240 to HF300