


Attention!

Joints always at same level for cover flashings as for horizontal panel joint!

Never install two flashings together with screws in length direction!

Use butyl tape over the support flashing joints!

Always use a tape roller on sealant tapes to ensure maximum sealant effectivity!



Information about joint sealants can be found in details OR-E-105 and OR-E-106.

Panel fixing, see detail OR-PF1


(LA-34) Omega flashing
or other alternative flashing

(FS-11) Flashing screw, c/c 300 mm

(TT-43) Sealant tape, butyl

(FS-11) Flashing screw, c/c 300 mm

(TR___) Joint insulation, Stone wool

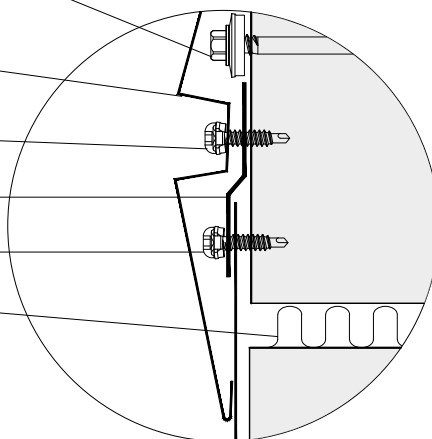

(FS-11) Flashing screw, c/c 300 mm

Panel fixing, see detail OR-PF1

(TT-31) Frame sealant stripe, steel/wood

(AFPLB39) L-flashing, corner

(AFPLA34) Omega flashing

(TT-43) Sealant tape, 60mm

(TT-33) Flashing sealant tape

