

Information about joint sealants can be found in details OR-E-105 and OR-E-106.


**Attention!**

Joints always at same level for cover flashings as for horizontal panel joint!


Never install two flashings together with screws in length direction!

Use butyl tape over the support flashing joints!


Always use a tape roller on sealant tapes to ensure maximum sealant effectivity!





### Omega flashing system type 2



AFPLA17A, Support profile, Omega  
Thickness= 0.6 - 0.7 mm



AFPLA16 Omega flashing

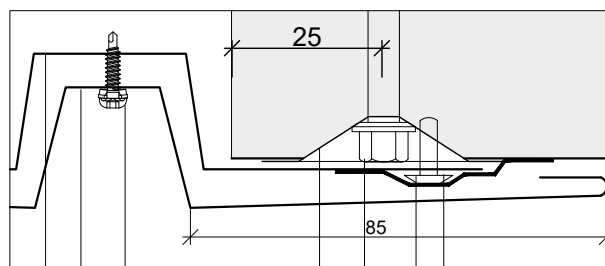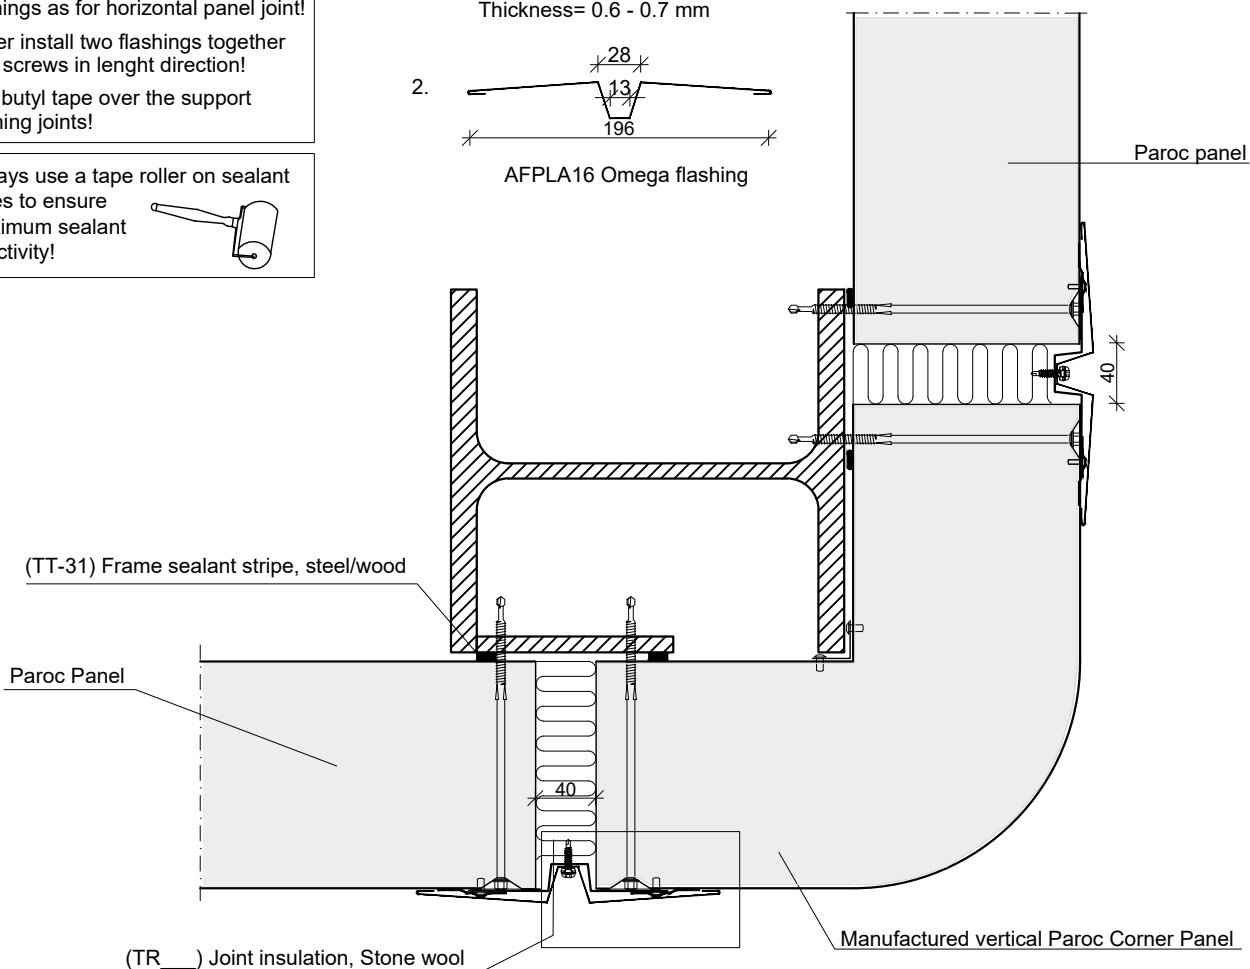

(AFPLA17) Support profile, Omega

(AFPLA16) Omega flashing

(FS-11) Flashing screw, RST c/c 300 mm

(TT-43) Sealant tape, butyl, omega flashing

(FS-22) Flashing rivet c/c 300 mm

Panel fixing, see detail OR-PF1

(IF-11) Counter sink washer, RST  
needs predrilled holes d=27mm in the external sheet