



Paroc Panel System:	Hygiene	Detail No.:	HY-E-301
Type:	Cladding Detail	Scale:	1:5
Subject:	Paroc Panel fixing to steel frame Horizontal installation	Revision:	A
		Date:	02/2012
		Revision Date:	28.04.2021
		Signature:	KjN
		Revision Signature:	JeN

Notice: Principle Master Detail


Project specific changes on designer's responsibility

Copyright Paroc Panel System 2019-07-01

Attention!
In case of direct food contact, use sealant type TT-16!

Attention!
Joints always at same level for cover flashings as for horizontal panel joint!
Never install two flashings together with screws in lenth direction!

Always use a tape roller on sealant tapes to ensure maximum sealant effectivity!

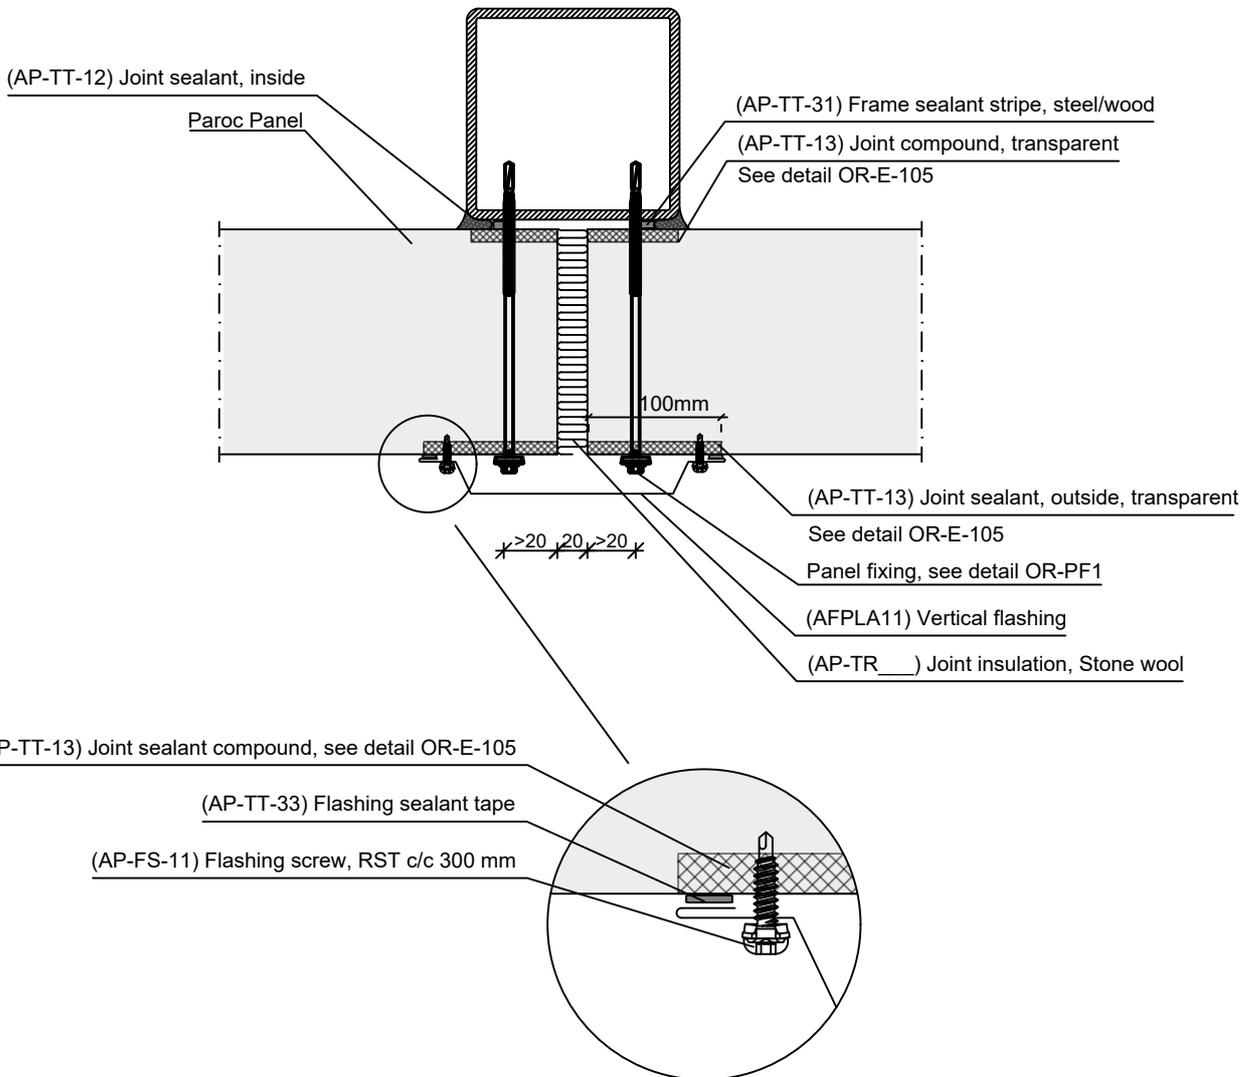

This detail has been done to help architects, engineers and installers when using PAROC panels. Before using this detail, check latest version at www.parocpanels.com